

Montageanleitung

LED - Unterbauleuchte EyePod 90 und EyePod 180

PÖLLET
PRODUKTION
Allersberger Str.52
90596 Schwanstetten

Zum Befestigen an Schrank, Vitrine, Zwischenboden usw.
Vor der Montage ist zu beachten :
- nur LED-Netzteile nach EN 61347-2 -13 verwenden


Spannung : 12 VDC
Leistung : EyePod 90 1 x 6,0W
EyePod 180 1 x 6,0W

Montage nur durch eine Fachkraft unter Beachtung der geltenden Vorschriften !

Vorsicht bei scharfen Kanten, Verletzungsgefahr !

MONTAGE:

Vor der Montage Leuchtenabdeckung abnehmen (1 und 2) und den Reflektor (3) entfernen. Die LED-Leuchte an gewünschter Stelle mit beiliegenden Schrauben befestigen (4). Nach Montage Reflektor wieder eindrücken (asymmetrischen LED-Ausschnitt beachten) und Abdeckung in umgekehrter Reihenfolge wieder aufschieben (5 und 6). Anschlußleitung der Leuchte knickfrei ohne Beschädigung der Isolierung verlegen. Nach erfolgter Montage den Strahler direkt oder mit der beiliegenden 1,5m langen Verbindungsleitung mit dem Netzteil verbinden. Netzteil nicht überlasten, immer auf die Nennleistung achten!

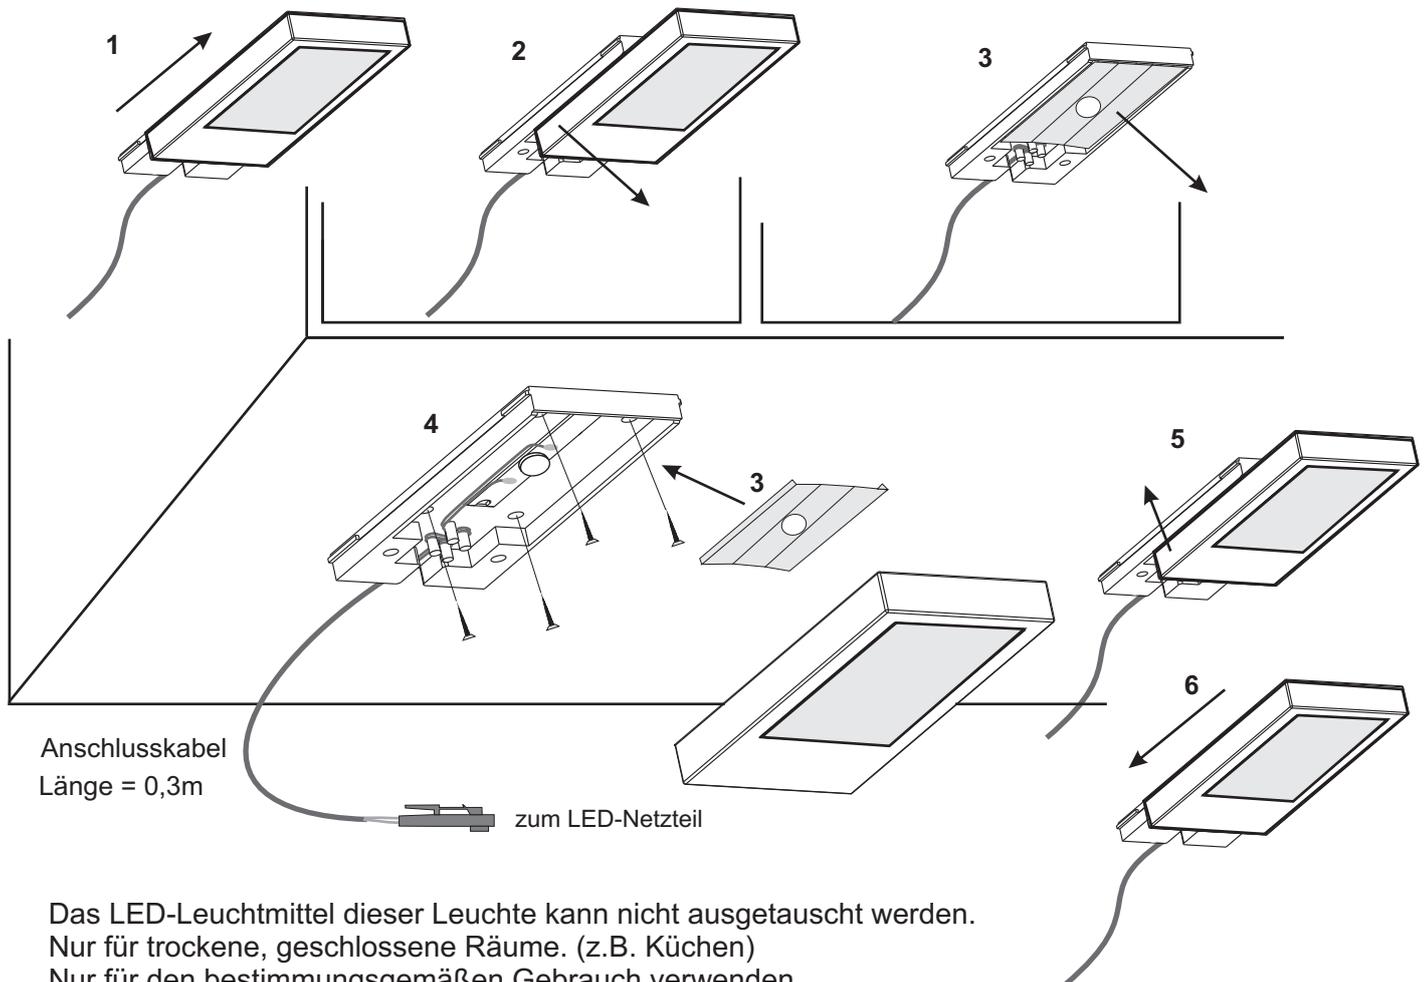

ACHTUNG :

Die Original-Anschlusskabel (Trafo- sowie Lampenleitung) dürfen nicht verlängert oder beschädigt werden. Muß eine Veränderung oder ein Austausch vorgenommen werden, so hat dies nur mit Originalersatzkabeln des Herstellers nach den gültigen Vorschriften durch eine Fachkraft zu erfolgen!

Die Montagerichtung laut Abbildung muß eingehalten werden (Wärmewicklung) !

Um die Oberfläche der Leuchte nicht zu beschädigen, keine Scheuermittel und -schwämme verwenden. Oberfläche nur mit einem weichen, feuchten Tuch reinigen; (handelsübliche Spülmittel gut geeignet); keine lösungsmittelhaltigen Reinigungsmittel oder Alkohol !

Installation Instructions EyePod and EyePod 180 LED console panel

PÖLLET
PRODUKTION
Allersberger Str.52
90596 Schwanstetten

goes on underside of cabinet, showcase, shelf boards, etc.
before commencing installation, have in mind:
- only use LED power supplies IAW EN 61347-2-13


voltage: 12 VDC
wattage: EyePod 90 1 x 6,0W
EyePod 180 1 x 6,0W

Installation work is limited to skilled personnel in compliance with local or national regulations !

INSTALLATION: Beware of sharp edges, danger of cuts !

Uninstall diffusing glass (1 & 2) and uninstall reflector (3); attach LED lamp in place you want and secure with screws from hardware bag (4). To complete installation, fit reflector in place (please mind the asymmetric LED aperture) and slide diffusing glass in place (5 & 6).

Route connecting cable straight, do not damage insulating sheath. Branch lamp with power supply module either direct, or using the 1.5 m extension from the hardware kit.

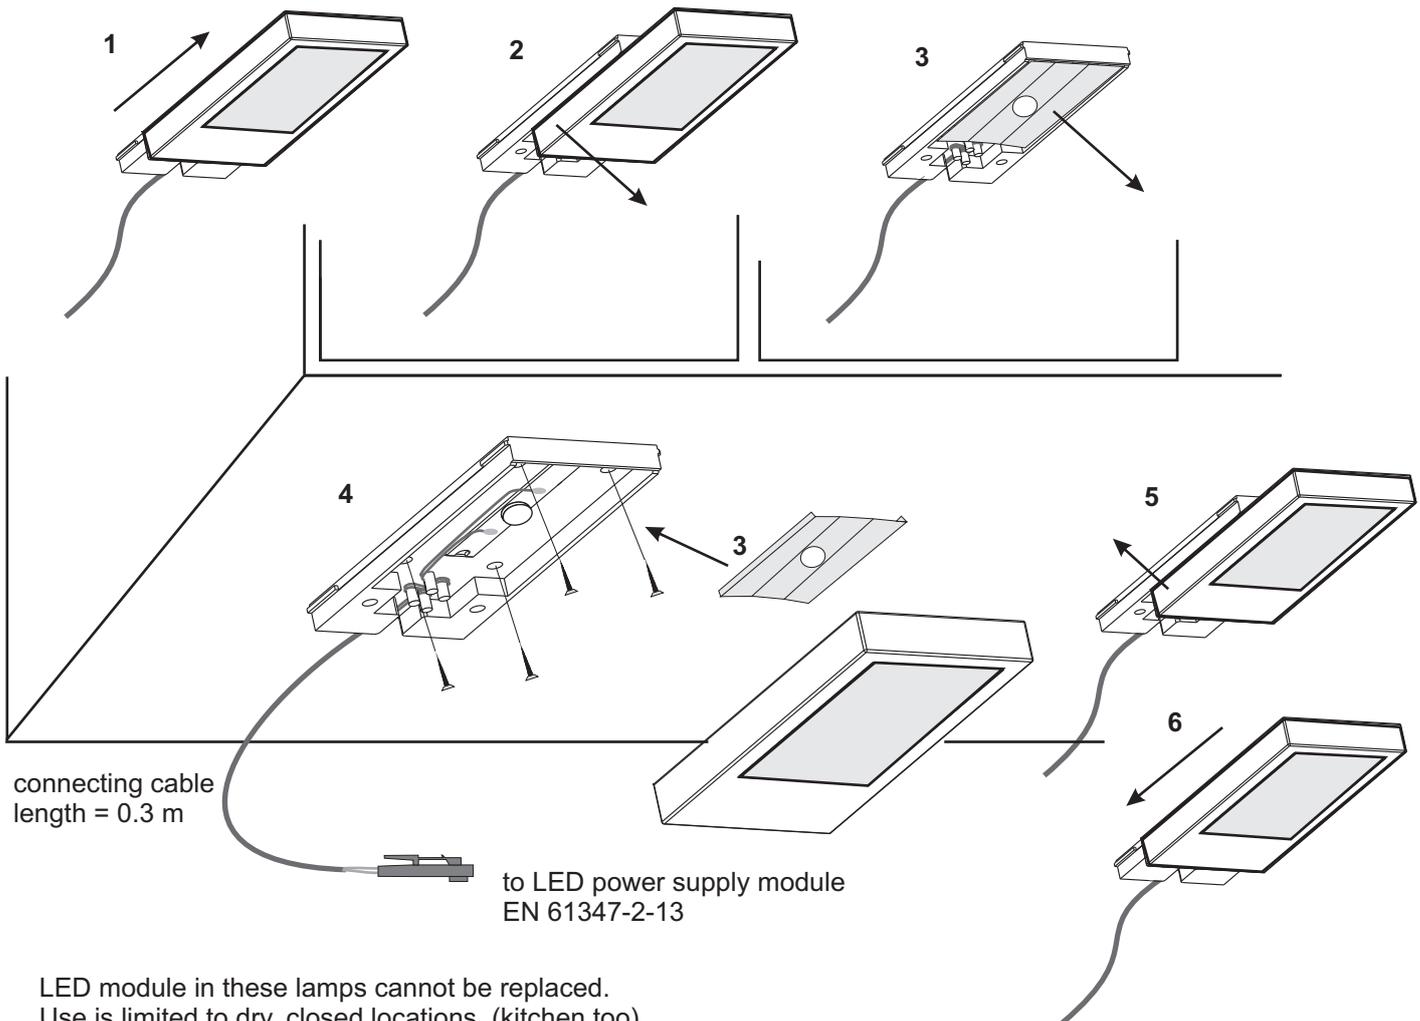

LED module in these lamps cannot be replaced.
Use is limited to dry, closed locations. (kitchen too)
Do not use beyond the scope of proper use !

CAUTION !!

Do not extend or damage original cables (both, lamps connection cables and power supply module power cord).
If cables need to be modified or replaced, such work is limited to skilled personnel using genuine cables and complying with local regulations !

Install as shown (dissipation of heat) !

To avoid damage to your lamp's surface, never use solvents, abrasives or abrasive sponges for cleaning. Clean with soft, damp cloth only (conventional dishwashing agents recommended); do not use solvents or alcohol!

subject to change without notice



Mont_Eye_Pod_d_e
Art.Nr.: 51_030_001_0563 Stand : 07_2009